

Overview

Each FUV is assigned a unique 6-digit PIN (Personal Identification Number) at the factory. This PIN can be used to turn the FUV on and off without using a key (refer to the FUV Owner's Guide for details).

The Factory-Assigned PIN for your FUV is:

(write in below, and keep this card for your reference)

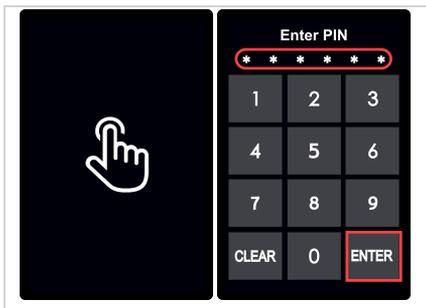
--	--	--	--	--	--

- *This factory-assigned PIN cannot be changed or deleted.*
- *Keep this PIN information in a safe and secure location.*
- *Do not share the factory-assigned PIN with anyone.*

Setting a User PIN on your FUV

Although the factory-assigned PIN cannot be changed, a custom *User PIN* can be added to the FUV. Once a User PIN has been added, it can also be used to turn the FUV on and off. Further, the User PIN can be changed at any time.

Note that even after a custom User PIN has been added, the factory assigned PIN also still works.

	<ol style="list-style-type: none">1. Press anywhere on the Display to invoke the <i>Enter PIN</i> keypad.2. Enter the 6-digit factory assigned PIN.3. Press ENTER to start the FUV.
	<ol style="list-style-type: none">4. Hold the trigger on the left grip and cycle the brake pedal to access the Drive screen.

CONFIG	5. Press CONFIG at the top right of the screen to open the Configuration Options screen:
<div style="display: flex; justify-content: space-around; width: 100%;"> <div style="background-color: #333; color: white; padding: 5px 15px; border-radius: 5px;">PIN</div> <div style="background-color: #008000; color: white; padding: 5px 15px; border-radius: 5px;">CONFIRM</div> </div>	6. Press PIN on the left side of the screen . 7. The system will prompt you to verify that you are changing the PIN. Press CONFIRM to proceed.
	8. Enter a new 6-digit User PIN and press ENTER. 9. When prompted, re-enter the User PIN to confirm and press ENTER. 10. The Display indicates that the PIN change was successful.

The new User PIN can now be used to start the FUV. Note that the User-PIN can be changed at any time.

The User PIN for your FUV is:

Record your User PIN below, and keep this card for your reference. Since you can easily change your User PIN, use this form to record each new User PIN assignment:

Read the **FUV Owner's Guide** for details on safely operating the FUV and on using all of the features and functions.

Customer Support	Contact Information
Customer Support: (541) 780-0032 Roadside Assistance: (866) 235-3920 support@arcimoto.com	2034 W. 2nd Ave. Eugene, OR 97402 (541) 683-6293 info@arcimoto.com